



WISDOM PLAYGROUNDS

Wisdom Playgrounds International GmbH
Hauptstraße 215, 09618 Grosshartmannsdorf
Germany
Mobile number: +49 162 831 92 11
p.koumoth@wisdomplaygroundsint.com

CUSTOMER'S GUIDE

Customer Name:


Sales Number:



Unit Number: 75-21014-E

Distributor Name:



Distributor Phone Number:

Making Date: 2026/3/11

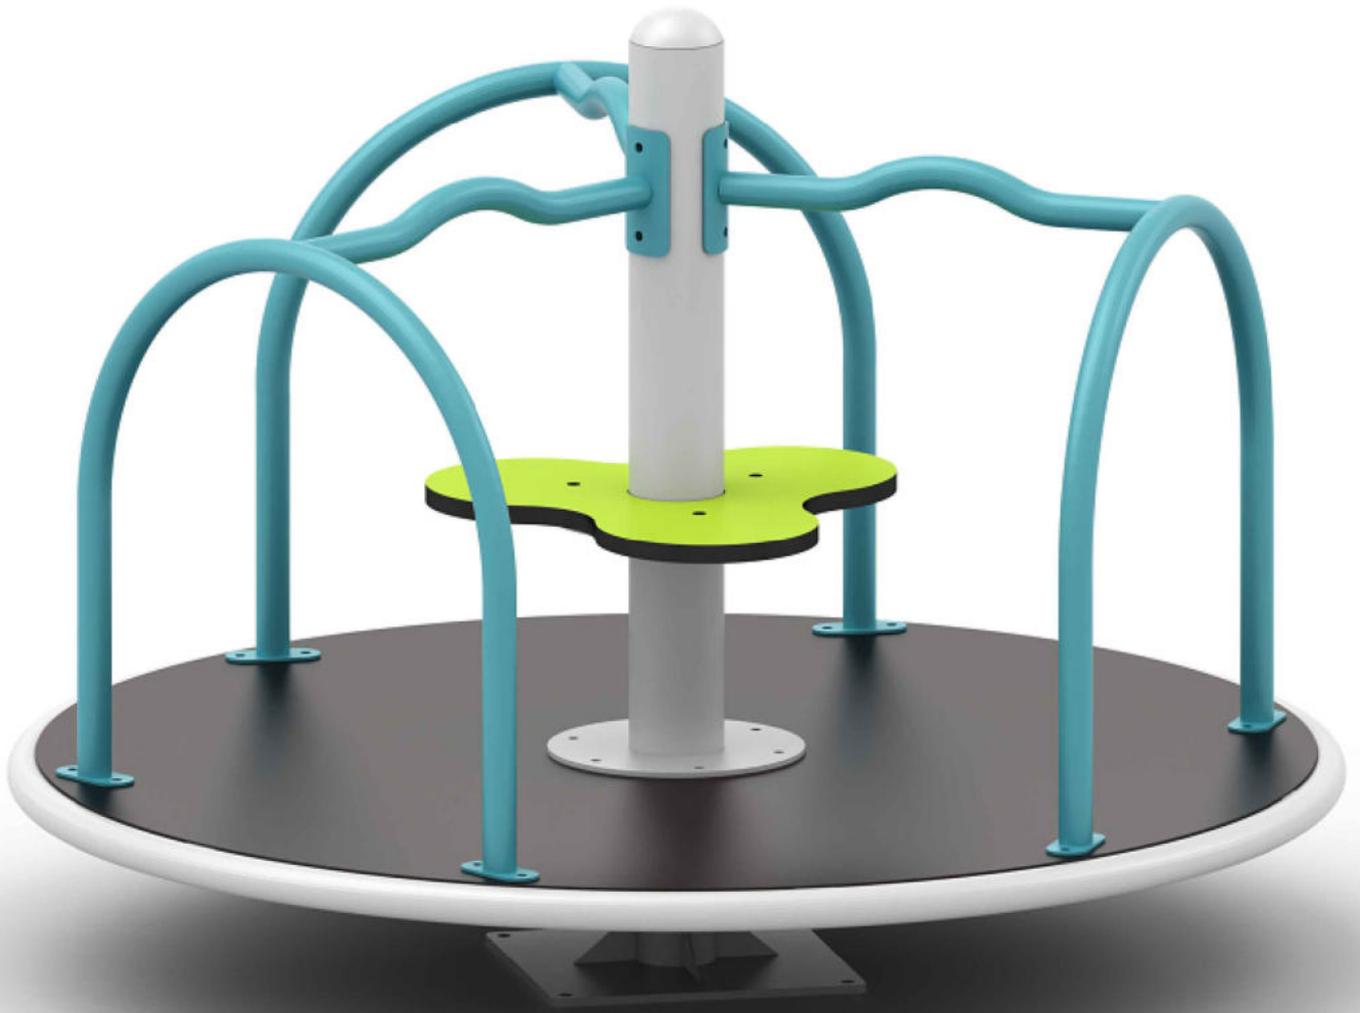


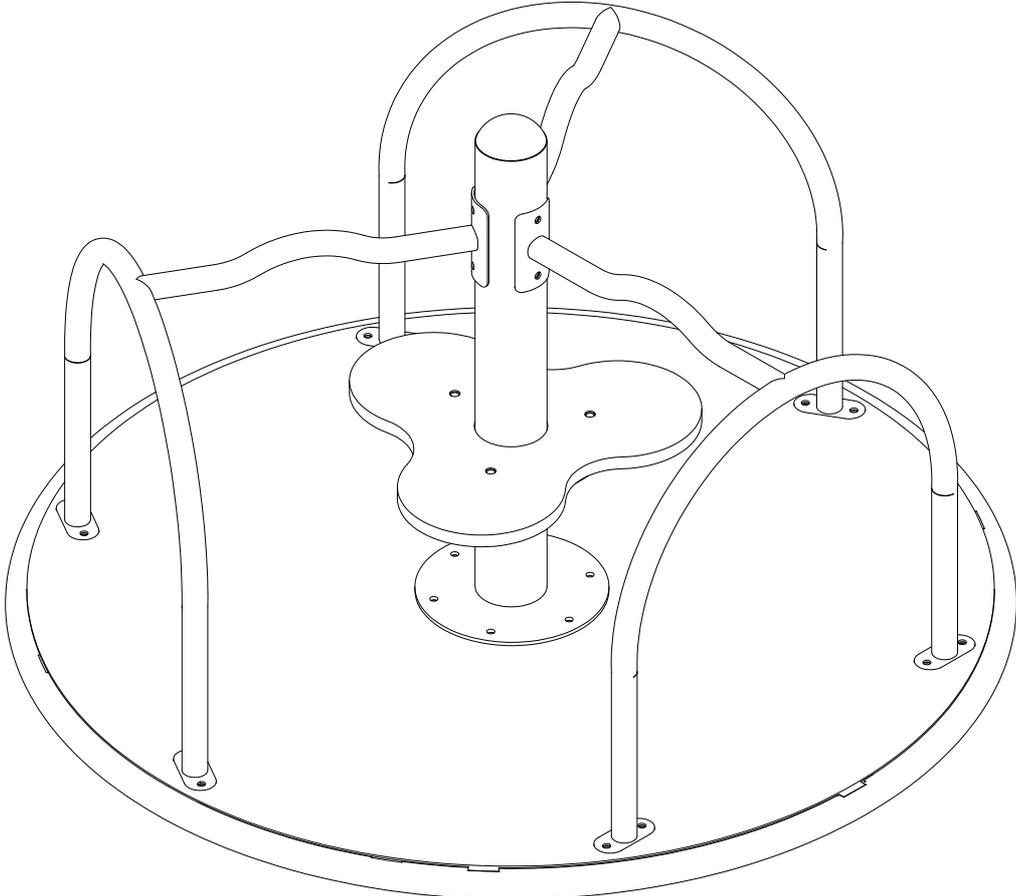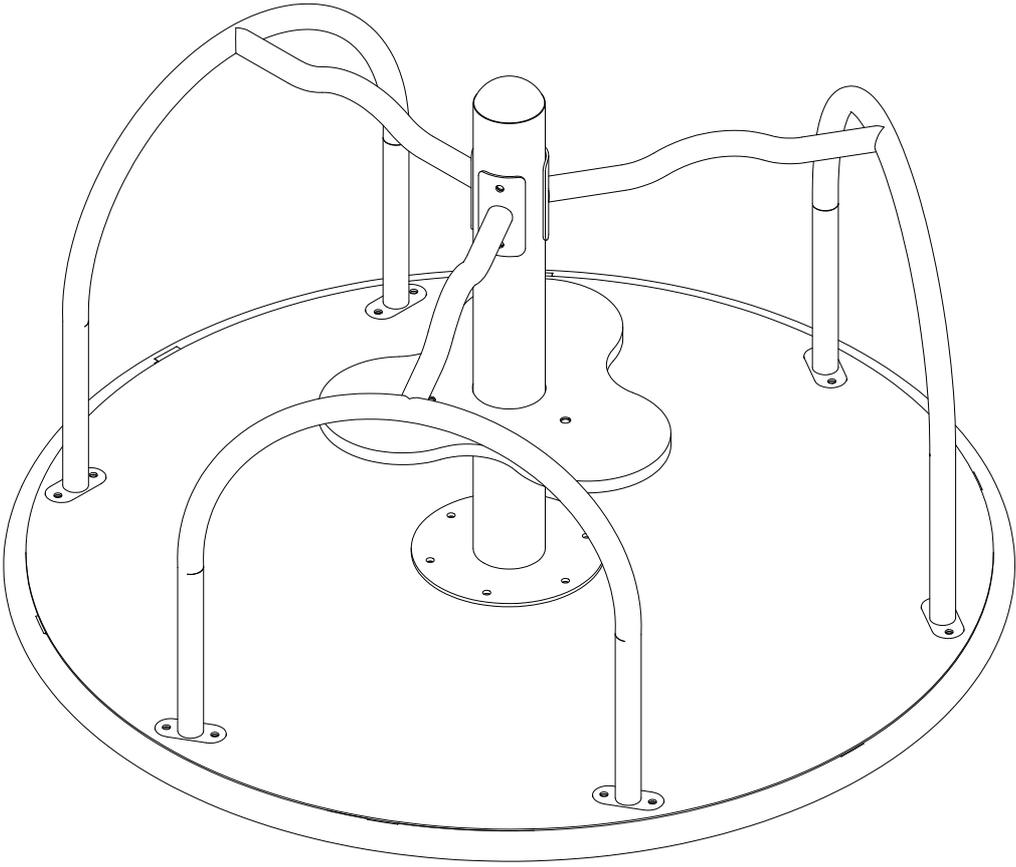







[cm]

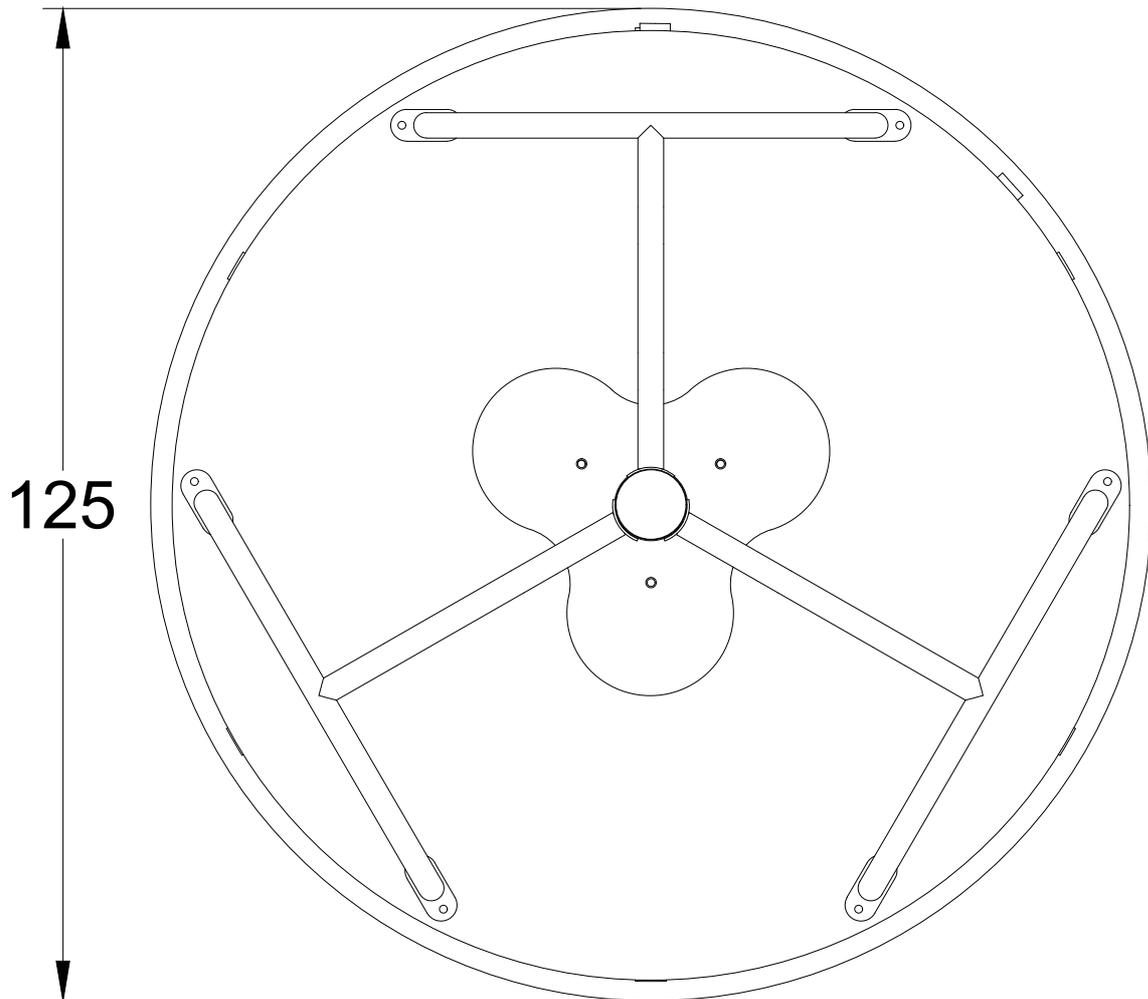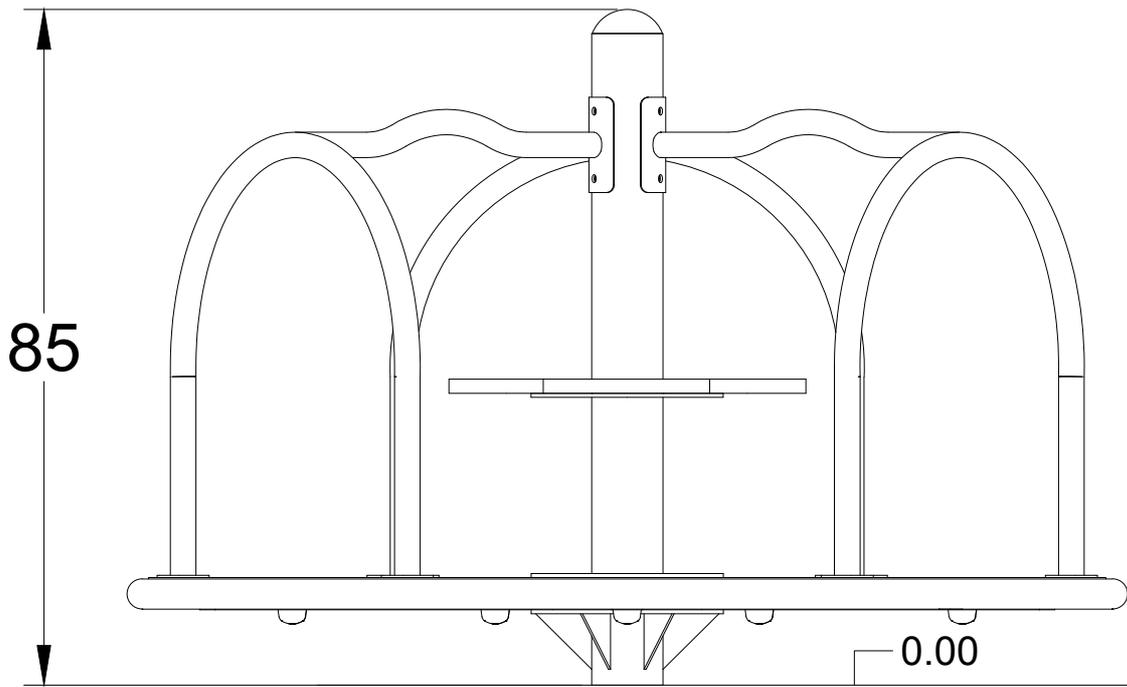



Site Layout

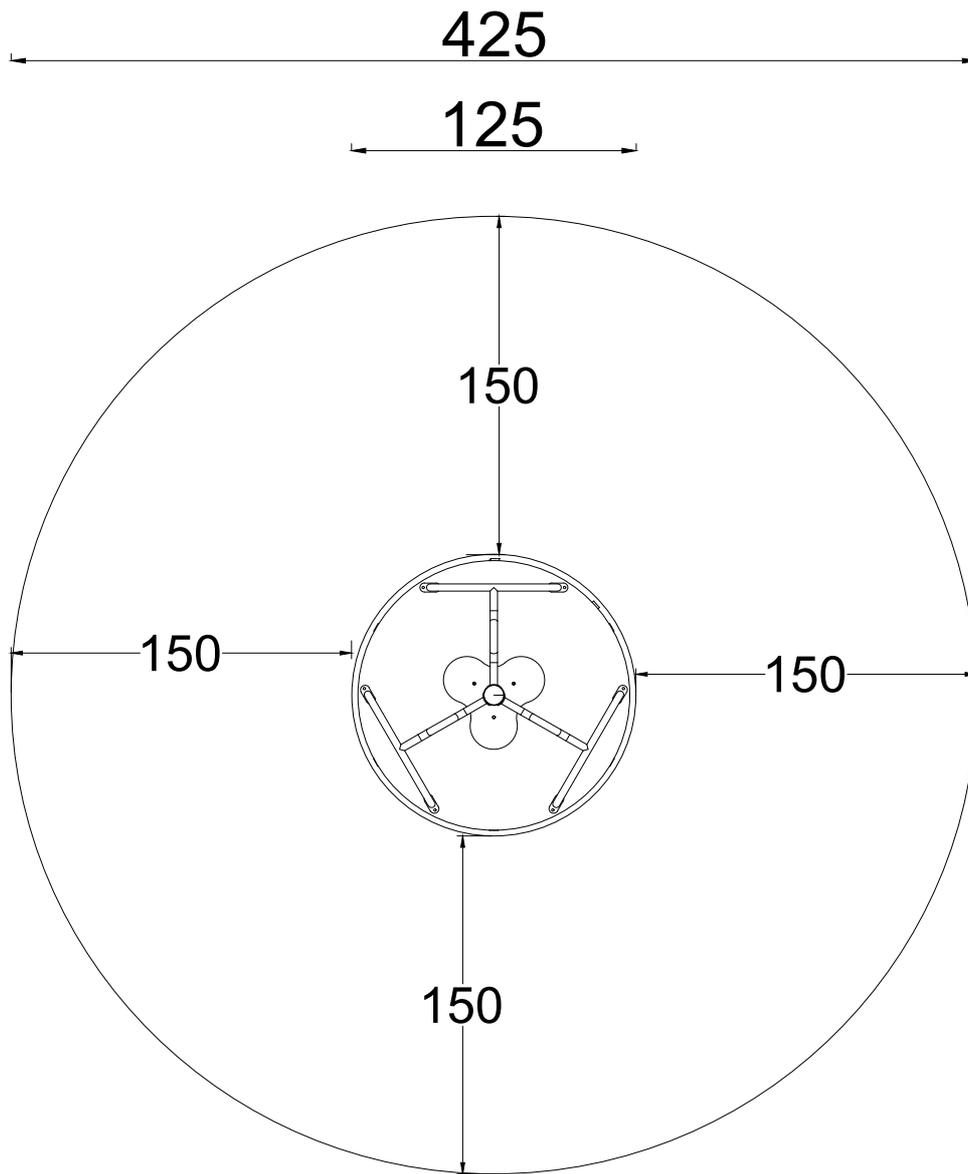




Surface Mounted Installation

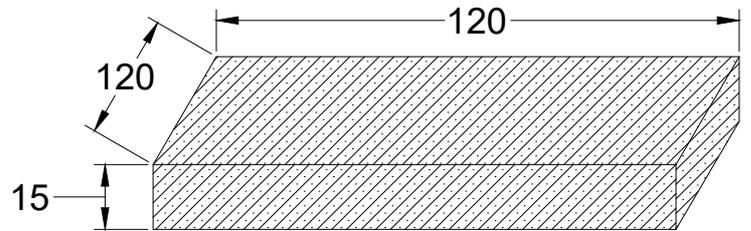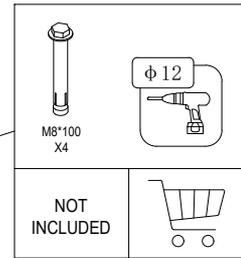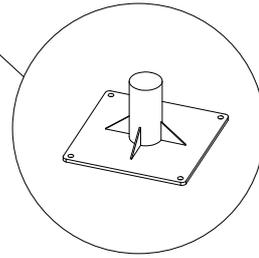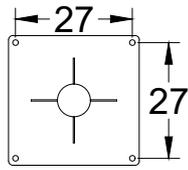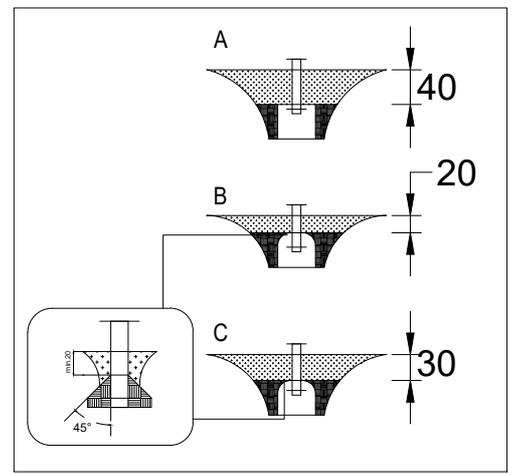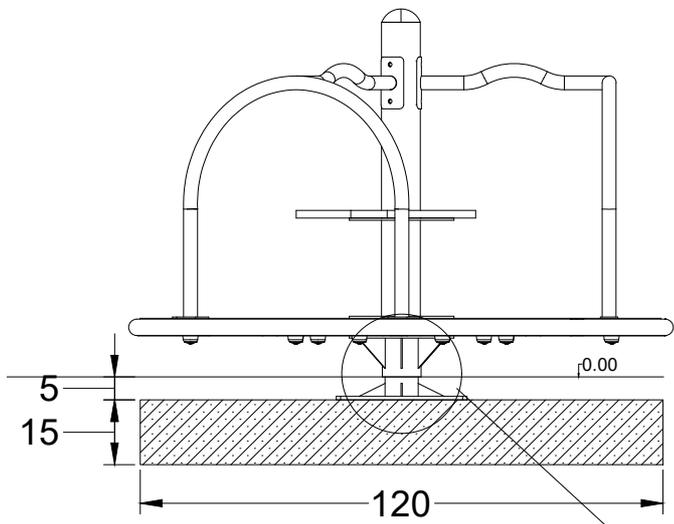







Inground Installation

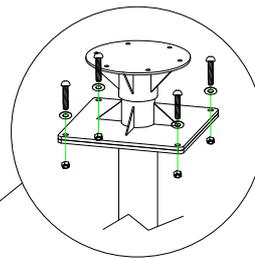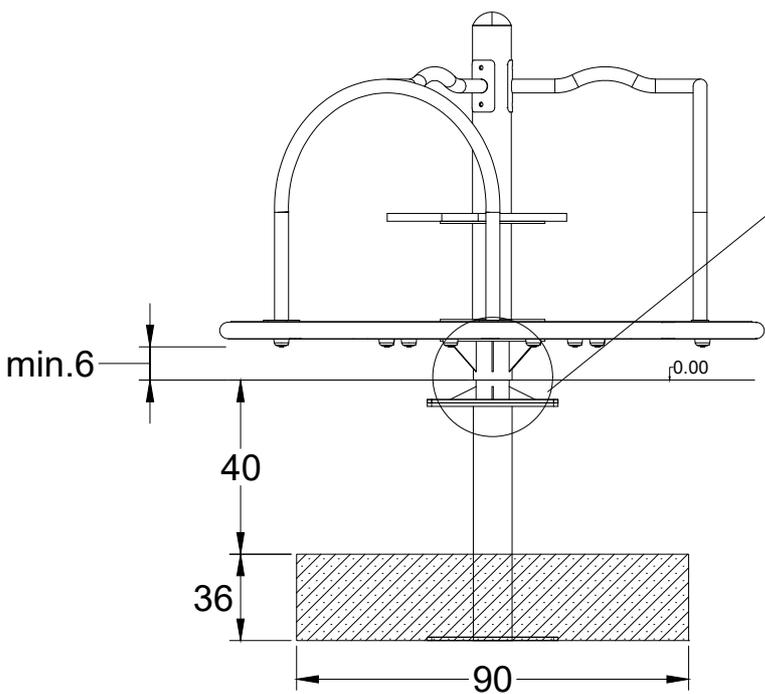

75-21014-E-EMDJ-111

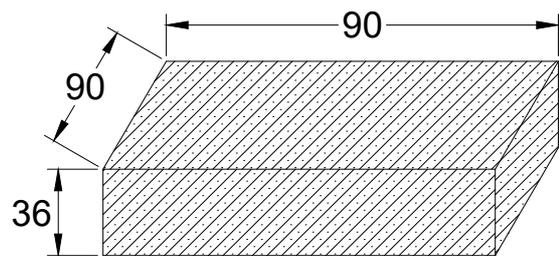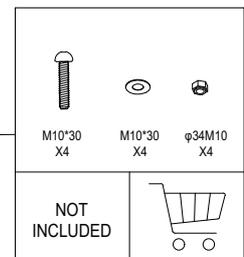


[cm]

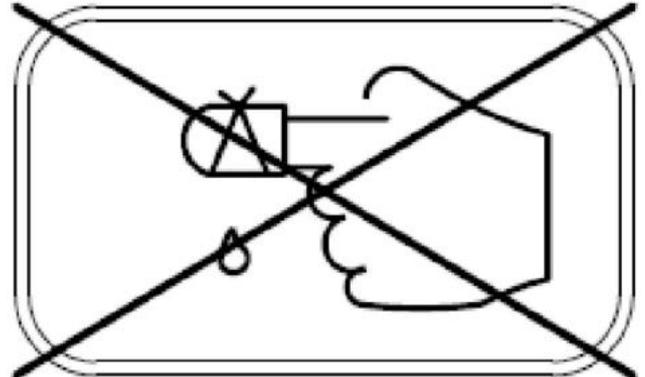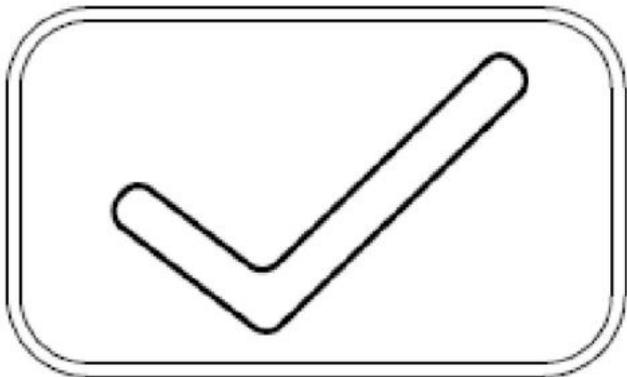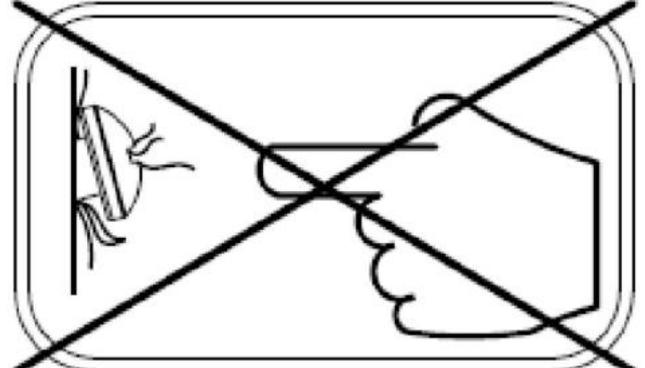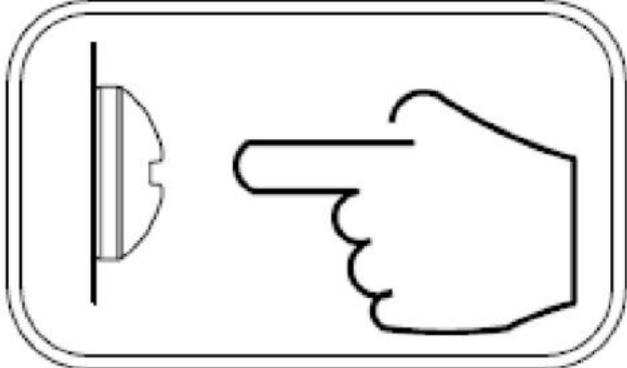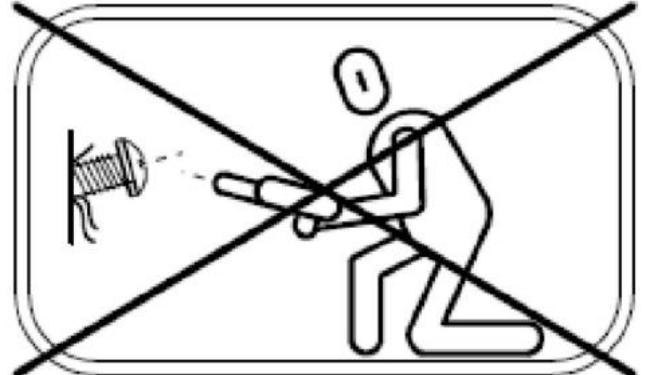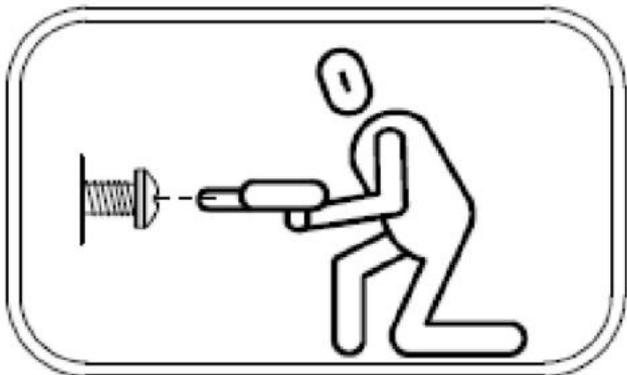


part list:


A

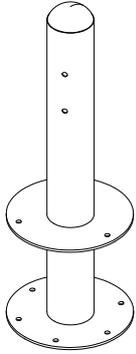


D

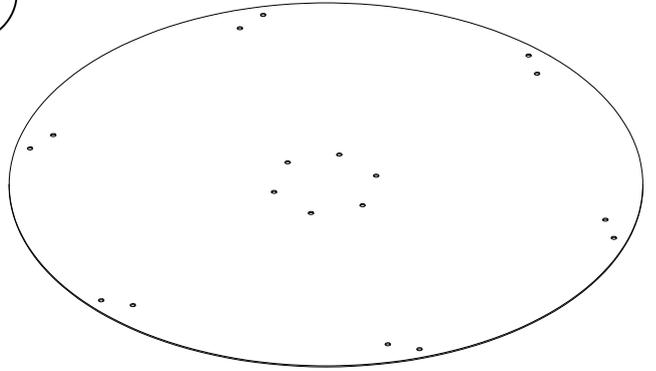


B X3

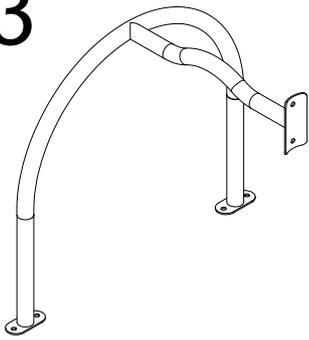


E

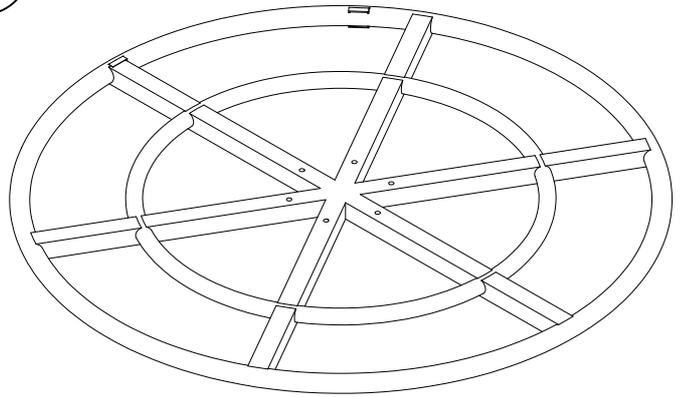

C

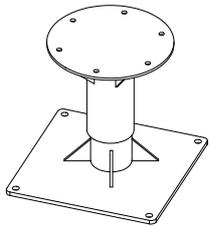

F

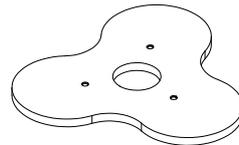


Installation Steps:

1: Align the round mount plate with the holes in the main frame.

2: Align the holes and lock the corresponding hardware.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*70	6
2	FLAT WASHER	8.5/23.5*T1.5	12
3	LOCK NUT	M8	6
4	PLASTIC CAP	φ34 M10	6

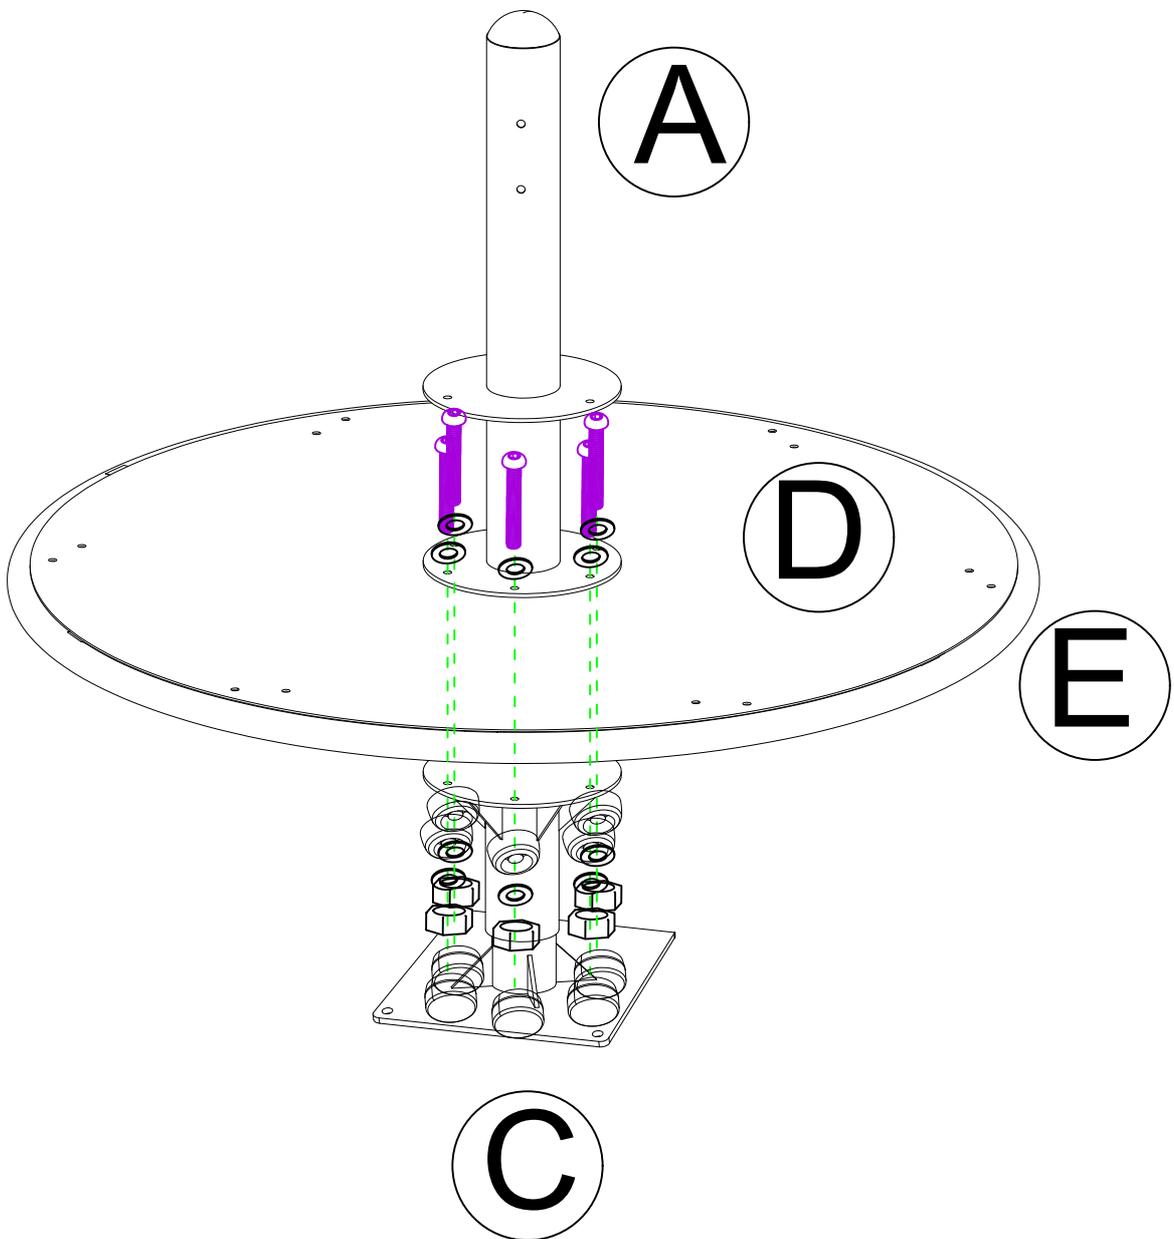


Installation Steps:

1: Insert the PE panel and align it with the round mount plate.

2: Align the holes and lock the corresponding hardware.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*40	3
2	FLAT WASHER	8.5/23.5*T1.5	6
3	LOCK NUT	M8	3
4	PLASTIC CAP	φ34 M10	3

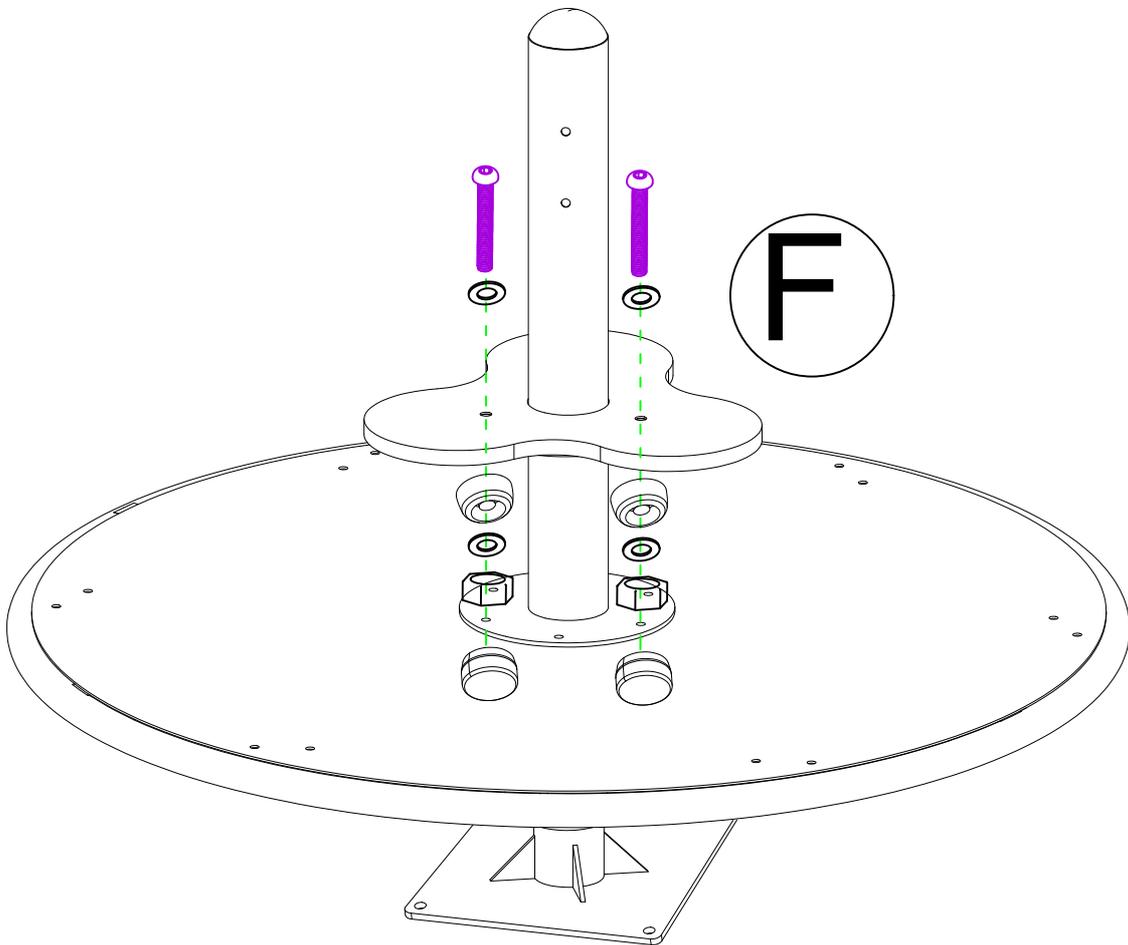


Installation Steps:

1: Align the round mount plate with the holes in the main frame.

2: Align the holes and lock the corresponding hardware.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*60	12
2	FLAT WASHER	8.5/23.5*T1.5	24
3	LOCK NUT	M8	12
4	PLASTIC CAP	φ34 M10	24

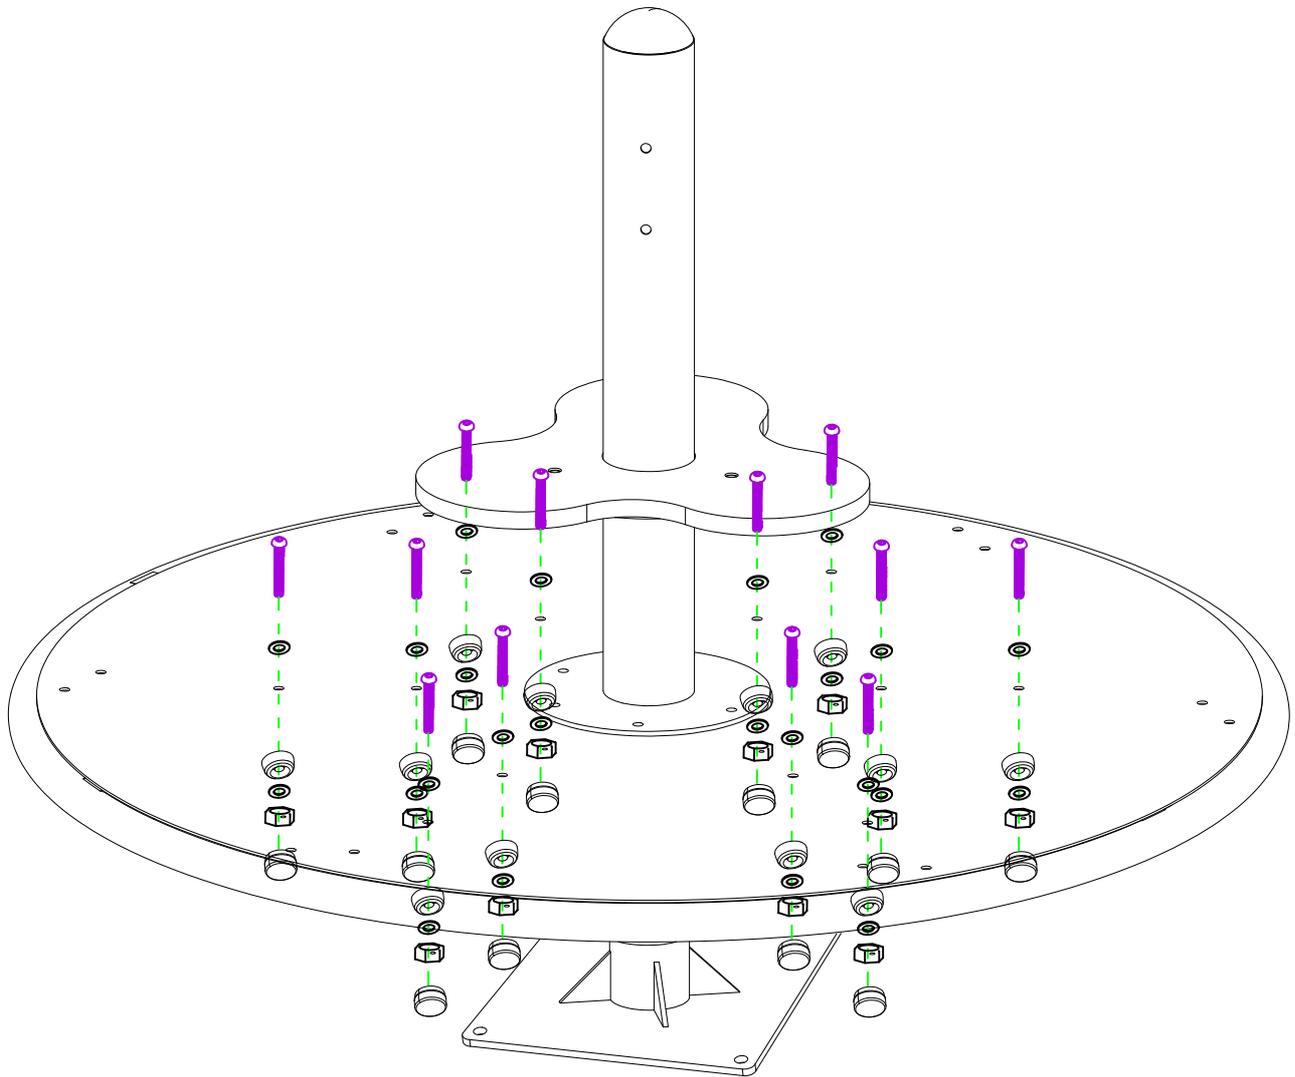


Installation Steps:

1: Align the handrails with the embedded hole on the center post.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*30	6
2	Spring Washer	M8*2.5	6

2: Align the holes and lock the corresponding hardware.

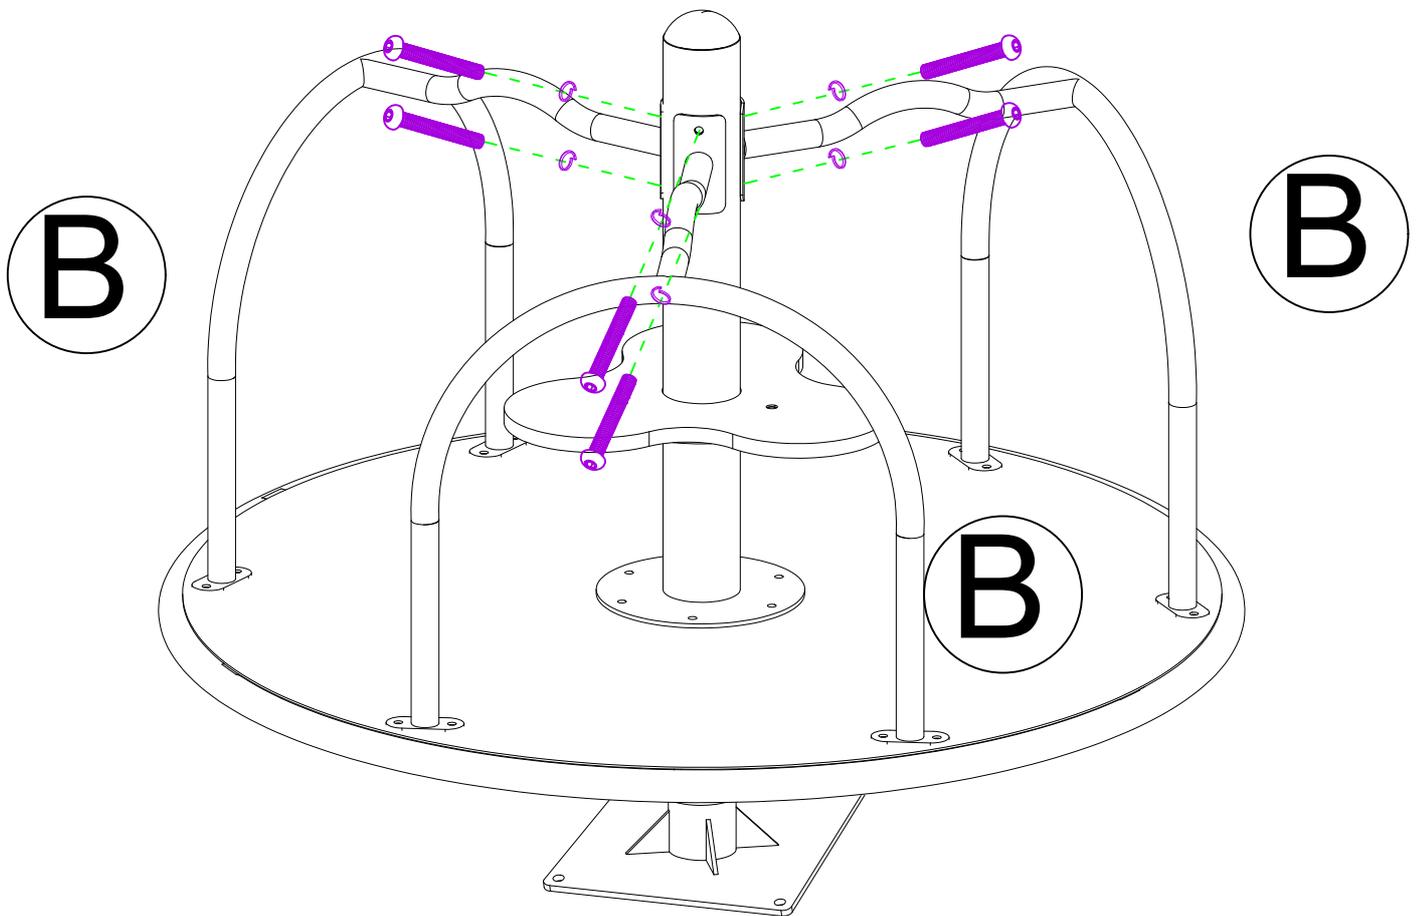


Installation Steps:

1: Align the handrails with round mount plate.


1: Align the holes and lock the corresponding hardware.

Number	Name	Model	Quantity
1	TAMPER RESISTANT TORX-BOLT	M8*20	12
2	FLAT WASHER	8.5/23.5*T1.5	24
3	LOCK NUT	M8	12

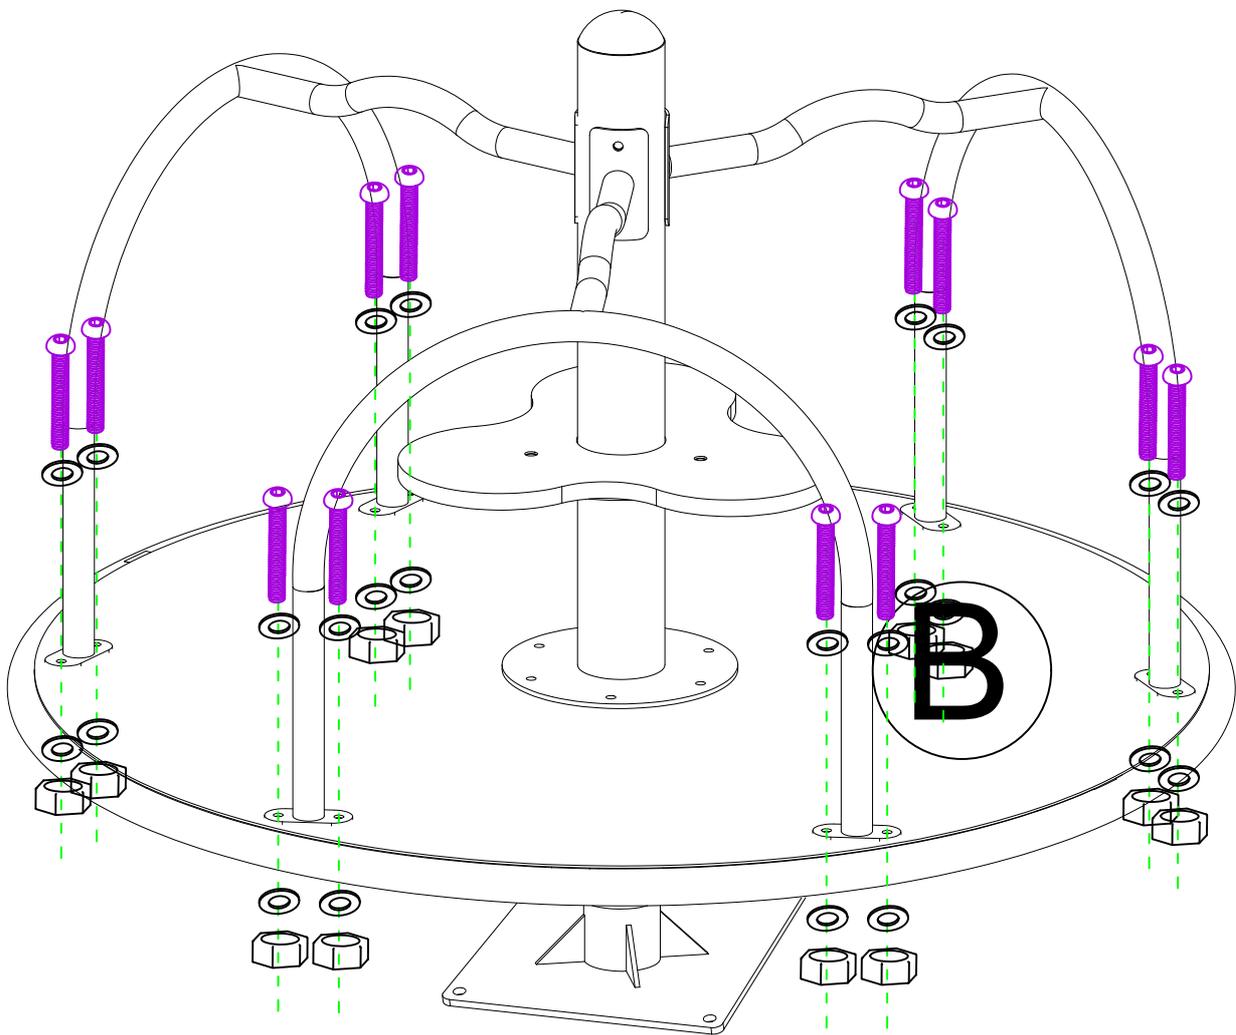

75-21014-E Twirl A Whirl

Number	Name	Model	Quantity
1	EXPANSION BOLT	M8*100	4

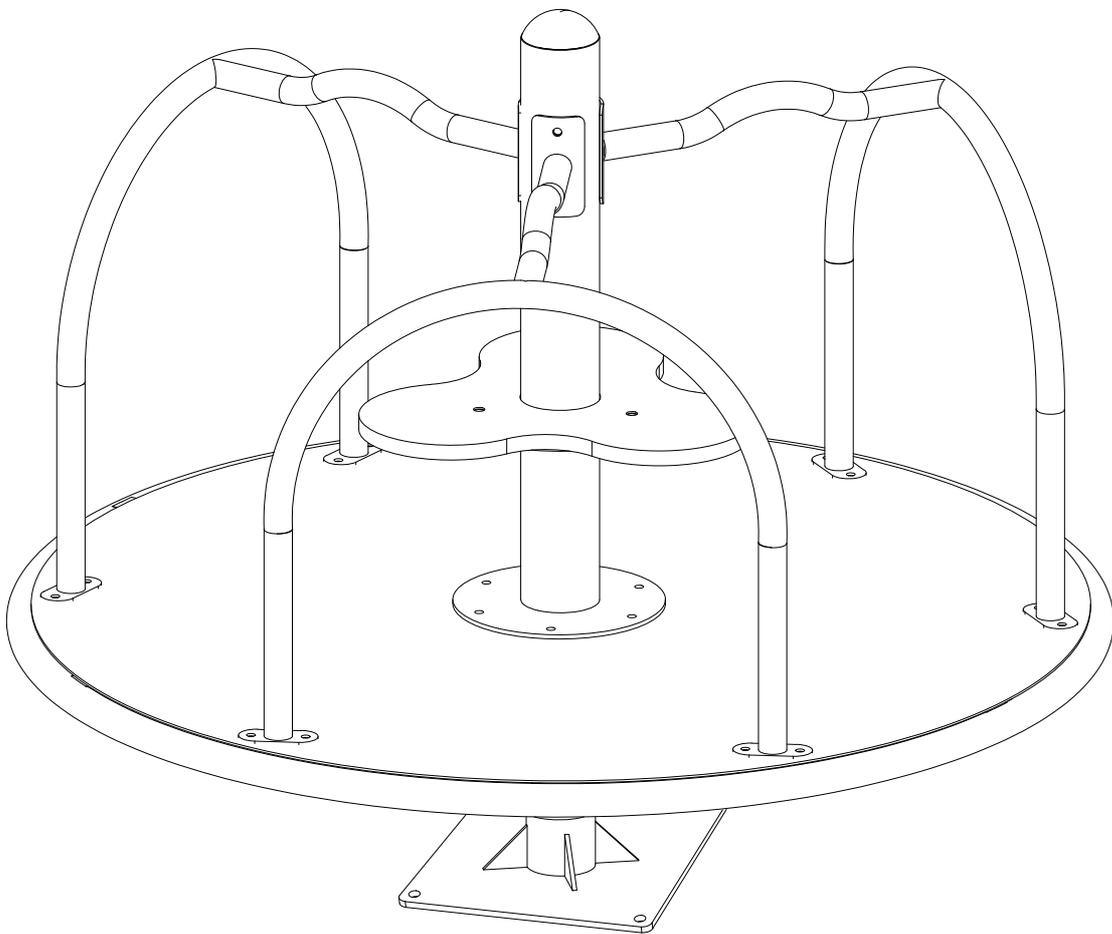

Thank-You
for the
Opportunity
to
Serve You!



Wisdom Playgrounds International GmbH
Hauptstraße 215, 09618 Grosshartmannsdorf Germany
Mobile number: +49 162 831 92 11
p.koumoth@wisdomplaygroundsint.com